

TX3028 VOICE OPERATED MUTING MODULE FOR THE TX8200 INSTALLATION INSTRUCTIONS

Thank you for choosing an Audio Telex TX3028 voice operated mute module. The TX3028 allows for muting of background music sources such as a CD player or cassette deck when a signal is detected at the microphone input Ch. 1, (which is usually the paging microphone input) in the TX8200 stereo mixer. Installation into the Audio Telex TX8200 is made simple by utilising a standard 'end' type connector plug, supplied on the module and a receptacle, already installed into the mixer. Please follow these easy instructions for installation.

⚠ **The installation of the TX3028 involves access to the inside of the mixer. Installation should only be attempted by a qualified technician. Always turn off the AC power and remove the AC power cord before attempting to access the inside of the mixer. Please contact your nearest Audio Telex office for details of your nearest qualified technician.**

For installation into the TX8200 mixer: Locate the empty 9 pin 'end' connector receptacle found on location X3 on the mixer PCB behind the input gain pot for Ch. 1. Connect the module to this receptacle, ensuring that the wires from the connector exit towards the left hand side of the mixer when looking from the front panel (or so that the blue trace on the wires from the module is facing the rear of the mixer).

Notes

The TX3028 is not suitable for installation into any other models of Audio Telex mixers or amplifiers. For voice operated muting suitable for other models please refer to either the TX3010 module or TX3014 dual priority muting module.